



TimePilot Vetro Mounting Template

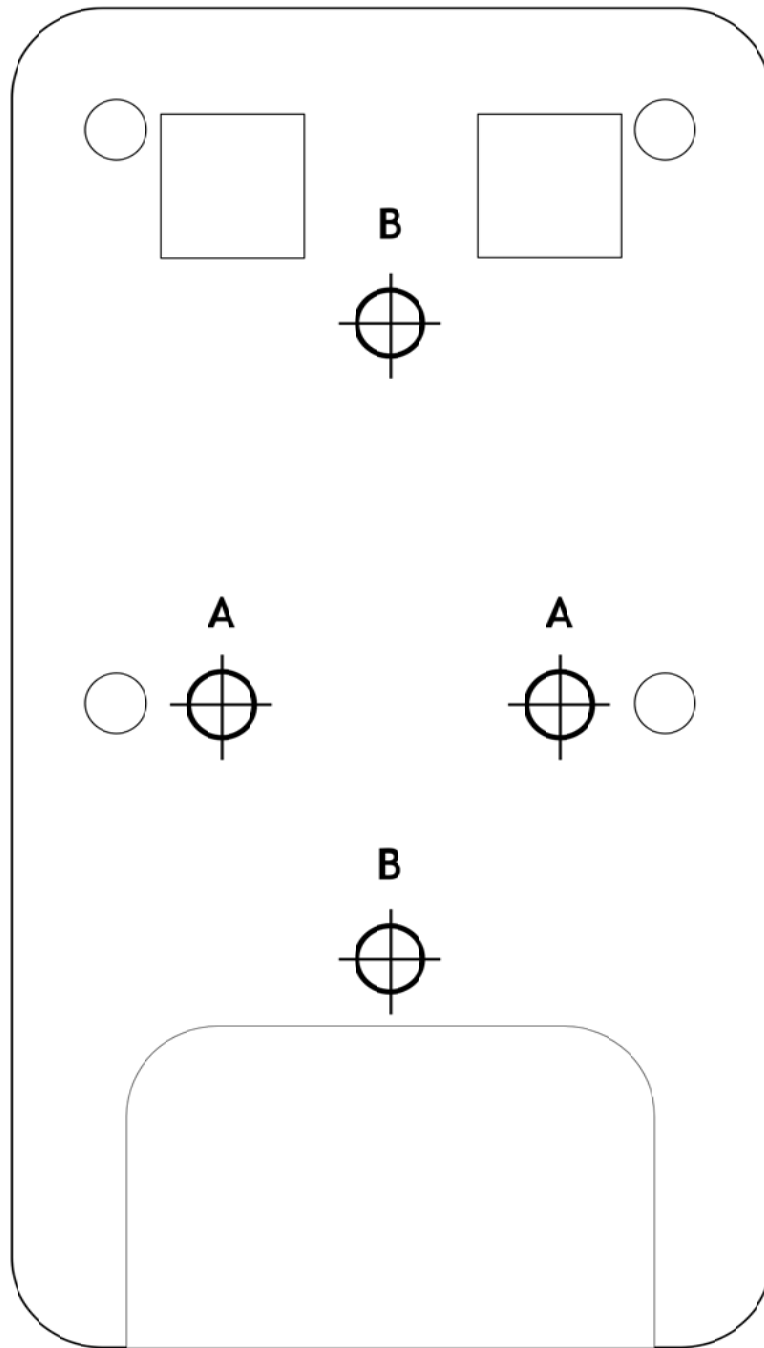

To easily mount the timeclock to a wall, attach this template to the wall and install the mounting screws where indicated by  (Use the holes marked "A" if you're using the included wall anchors or mounting to an empty junction box; use the holes marked "B" if you're mounting to a stud.)

Need another copy? You can download one here: <http://www.TimePilot.com/SupportCenter.htm>. Please note: When printing this document, it's important that it not be scaled down by your printer software to fit the page. If the document is scaled down, the drilling dimensions will be incorrect and you'll drill your holes in the wrong places. If in doubt, use a ruler or tape measure to measure the box surrounding this text. It should measure 6 inches wide by 1 inch high. If it does not, check your printer settings and ensure that it is printing this document at 100 percent of its size.